
QRAE-3 (Quick Start Guide)

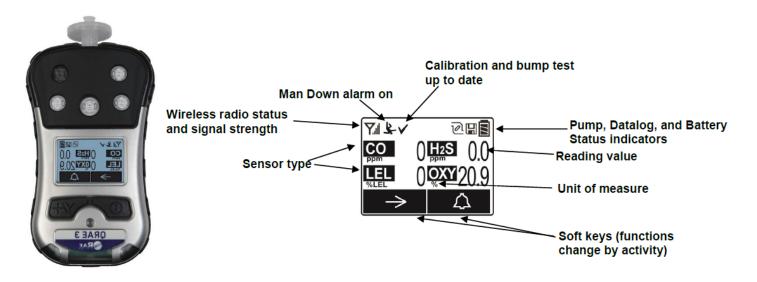

Power-On

- Press and hold to power on/off device. (Turn on before entering complaint area)
- Ensure Device is warmed up, charged and calibration/bump test is up to date

Clear Peaks and Minimum Values

- From main start-up page, press once to get to "Peak" screen
- Press <u>twice</u> to "Clear Peak & Minimum Values"
- Press <u>nine (9) times</u> to cycle back to main screen.

Enter "Communications" mode to calibrate/bump test

- From main screen, press ten (10) times to cycle to "Com" screen
- Place on AutoRae II cradle and Refer to <u>AutoRae II SOP</u> to calibrate/bump device