


MATCH THE C.G.A. NUMBER ON THE CYLINDER VALVE VALVE TO NUMBER ON THE REGULATOR NUT



DO NOT USE TEFLON TAPE ON C.G.A. CONNECTIONS

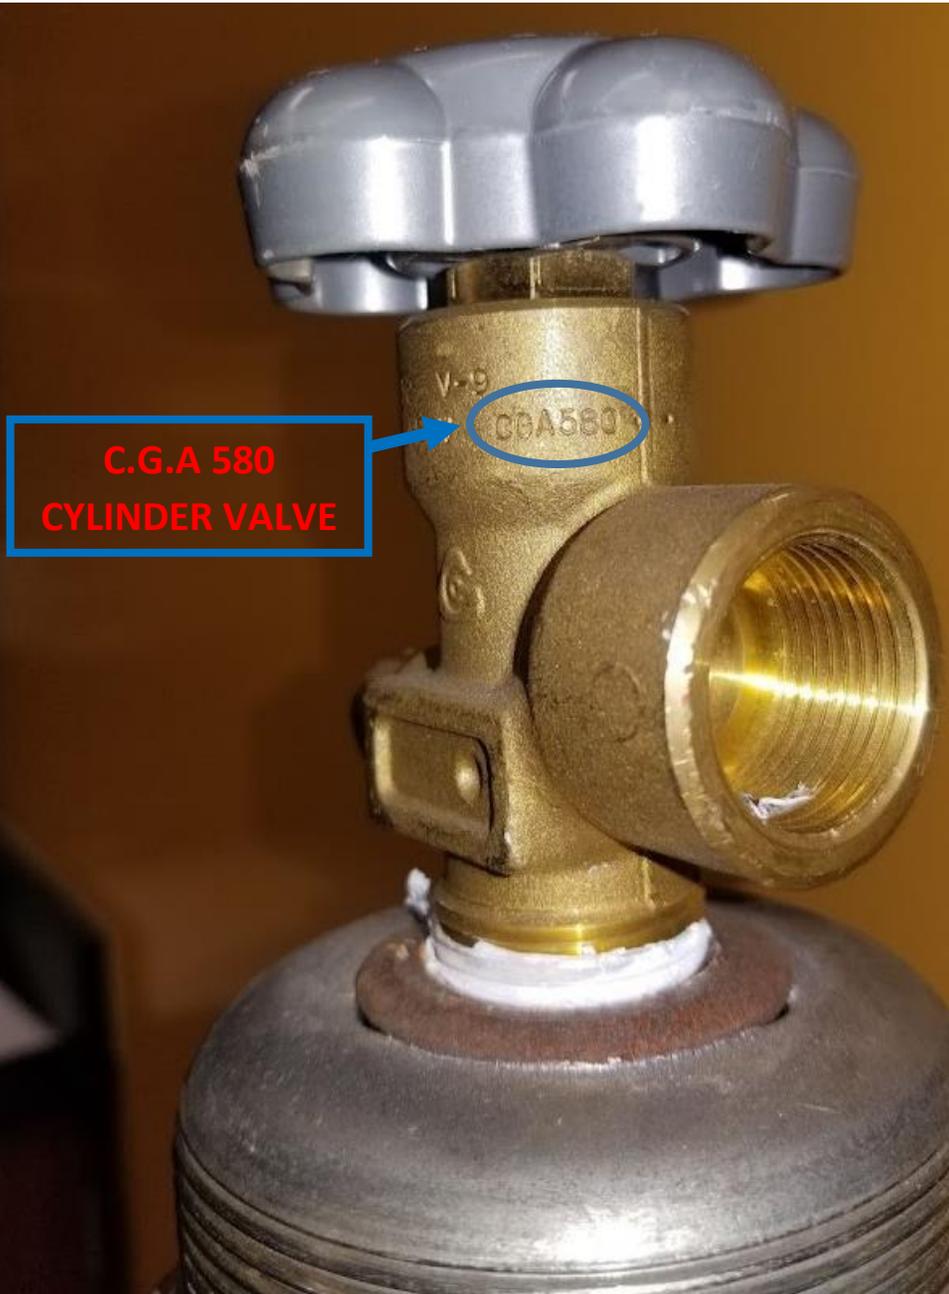

Common Flammable Gases

C.G.A. 510

Acetylene
Butane
Propane
Methane
Ethylene Oxide



Common Toxic Gases

C.G.A. 350

Arsine
Ethylene
Phosphine
Carbon Monoxide
Germane



Carbon Dioxide C.G.A. 320

Requires a gasket for sealing: this should be replaced often



Common Inert Gases

C.G.A. 580

Argon
Helium
Krypton
Neon
Nitrogen



Air C.G.A. 590

Left Hand Thread



Oxygen C.G.A. 540

NO TEFLON TAPE!



